



### Entering the Admin Setup Menu

1. Press the ENTER key (7) to enter Printer Setup mode. Display panel (2) shows a list of menu options.
2. Press either the UP or DOWN key (3) to cycle through the menus until [Admin Setup] then press the ENTER key to begin to log in to the Admin menu.
3. Enter the Administrator password (default is *aaaaa*) – use the UP/DOWN keys to cycle through the alphabet, press ENTER to accept the character currently displayed and move on to the next digit. Press ENTER again accepting the last character to enter the password.

Now you have gained access to the Admin Setup menu you can use the UP and DOWN keys to cycle through the various settings. Press either key until [Network Setup] then press ENTER to enter the Network Setup menu.

Again, use the UP and DOWN keys to cycle through the various settings. To change a setting press the ENTER key when the setting name is displayed then use the UP/DOWN keys to cycle through the settings. Press ENTER to select a setting then ENTER again to save – or press BACK (6) to return to the last higher level without changing the current setting.

In the Network Setup menu you can setup any of the following (bold item is default).

TCP/IP	<b>Enable</b> / Disable TCP/IP Protocol
IP Version	<b>IP V4</b> or IP V4+6
NETBUI	<b>Enable</b> / Disable
Netware	<b>Enable</b> / Disable
Ethertalk	<b>Enable</b> / Disable
Frame Type	<b>Auto</b> / 802.2 / 802.3 / Ethernet II / SNAP
TypeIP Address Set	<b>Auto</b> / Manual (Auto = retrieve IP via DHCP)
IP Address	xxx.xxx.xxx.xxx (enter IP in manual IP mode).
Subnet Mask	xxx.xxx.xxx.xxx (subnet mask for network)
Gateway Address	xxx.xxx.xxx.xxx (gateway [default router] address)
Web (interface)	<b>Enable</b> / Disable
Telnet	<b>Enable</b> / Disable
FTP	<b>Enable</b> / Disable

## **Accessing the Web Interface**

Once you have successfully joined the printer to your network you can monitor and/or administer it using the built in web interface.

To access the web interface, open any web browser (Internet Explorer, Firefox, Chrome etc.) then type `http://xxx.xxx.xxx.xxx/` into the URL bar (where `xxx.xxx.xxx.xxx` is the IP address given to the printer).

To change any settings via the web interface you will need to log in as an administrator.

To do so, click on the ADMINISTRATOR LOGIN button. The username is ADMIN and the default password is the last six digits of the printer MAC address (displayed on the status screen – use the last three character pairs ignoring colons). Once you are logged in you can reset the password to one of your own choosing from the Security tab.

*For more information on setting up your printer and/or using the web interface please refer to the manual supplied with your printer.*